


# Hygiene Station Set E AFP IMP T A SH T

Stainless steel disinfection stand with anti-fingerprint-coating, with manual ingo-man® plus disinfectant dispenser 1000 ml and drip tray

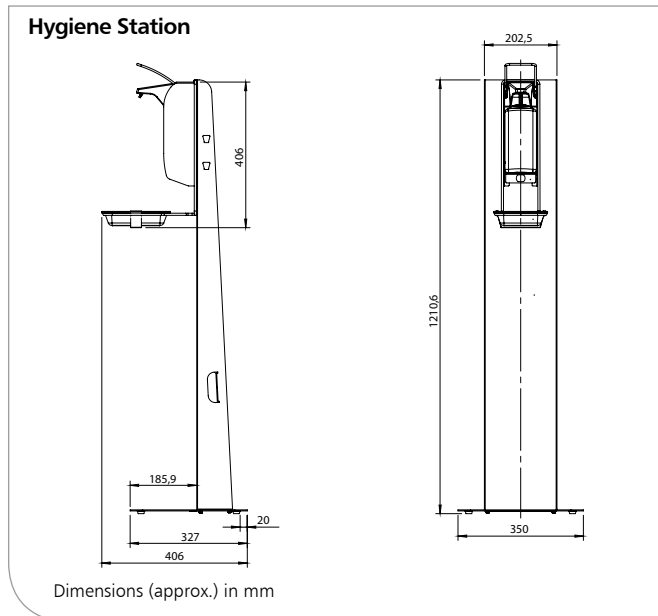

## Product characteristics Hygiene Station

- ▶ Stainless steel with Anti-Fingerprint Coating
- ▶ Ideal for entrance halls, very popular places and locations where wall mounted dispensers are either not desirable or not possible
- ▶ To support infection prevention in the public and semi-public area
- ▶ For self-assembly by the user
- ▶ Compact and suitable for single parcel shipment

## Technical data

Material: Stainless steel, brushed with Anti-Fingerprint-Coating (AFP)  
 Floor plate: Stainless steel, with Anti-Fingerprint-Coating (AFP) and rubber feet

## Product characteristics IMP T A

- ▶ Dispenser for liquid soaps without grit, alcoholic hand disinfectants, lotion, massage oil, etc..
- ▶ For 1000 ml disposable bottles as well as refillable containers and hygiene packages
- ▶ Pivoting face shield for simple pump replacement from the front without having to remove the dispenser from the hygiene station

## Technical Data

Housing: Aluminum  
 Dosing pump: Stainless steel  
 Dispensing quantity: different dosage adjustments (approx. 0.75/ 1.0/ 1.2 /1.5 ml)  
 Operating lever: short stainless steel lever

## Product characteristics SH T

- ▶ Drip tray, for hanging up above the dispenser
- ▶ Stainless steel, with plastic dish
- ▶ Prevents the dripping of the disinfectant off the hand onto the floor

## Description for tender

**Hygiene Station Set E AFP IMP T A/24 / SH T**  
**Art. No. 1420163**

... Pcs.

Hygiene Station Set E AFP IMP T SH T,  
 Stainless steel disinfection stand with anti-fingerprint-coating with manual ingo-man® plus disinfectant dispenser 1.000 ml and drip tray  
 Dimensions: W 350 x H 1260 x D 406 mm

Product: **ingo-man®**  
 Manufacturer: OPHARDT HYGIENE-TECHNIK GmbH + Co. KG

Subject to technical modifications.  
 Tests are required before new filling materials are used!



**OPHARDT HYGIENE-TECHNIK GmbH + Co. KG**  
 Lindenau 27 | 47661 Issum | Germany  
 Tel.: +49 (0) 28 35 18-10 | Fax +49 (0) 28 35 18-77  
 planer@ophardt.com | www.ophardt.com